


**300 Series:****300, 301, 3300, 4300, 6300****To install**



- 1** Install vent on one side of soffit plywood (between plywood and bottom of truss).
- 2** Install plywood on opposite side of vent.
- 3** Vent flanges rest on top of the soffit board.

**Other notes**

Vent comes in 8' (3 m) lengths for continuous application. Use supplied connector clips to join pieces together.

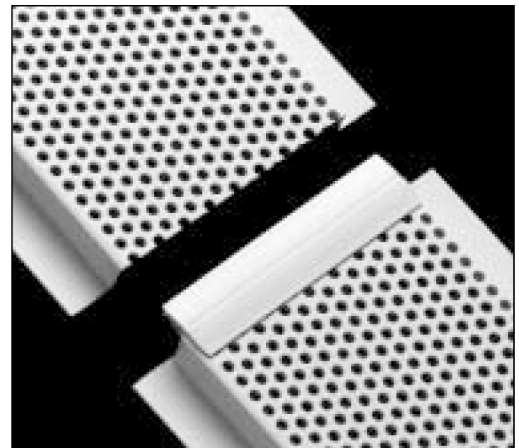

Nominal size: 3/8"

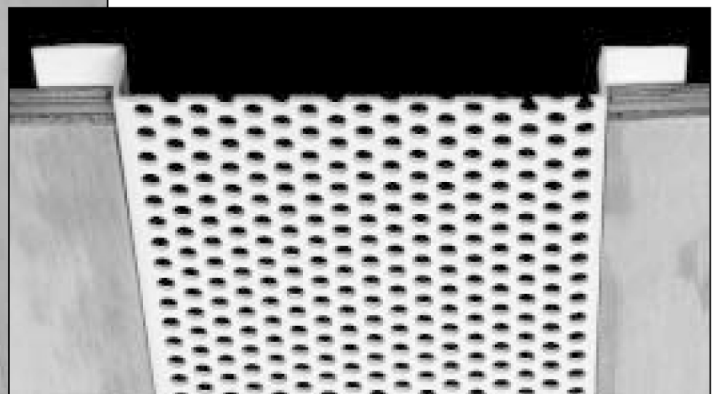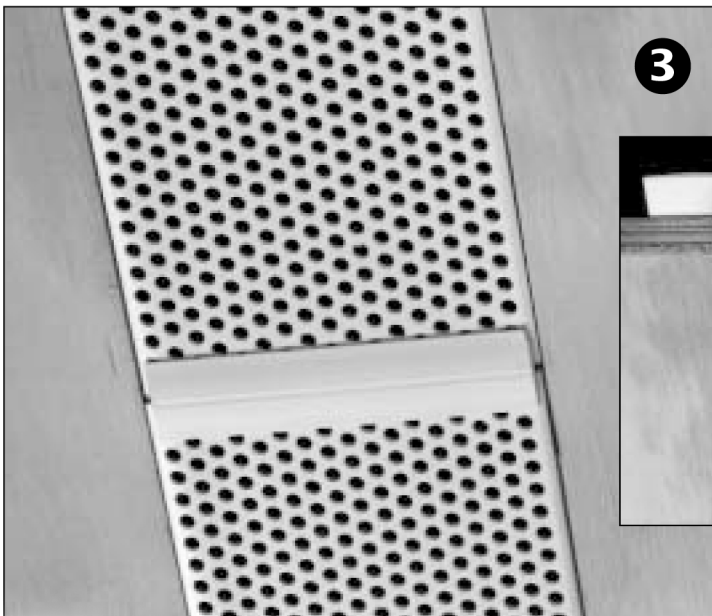

*Instrucciones en
español al dorso*